

EN Manual for Solight WN39 flashlight

Please read the following instructions carefully and follow them to ensure that the product serves you safely and to your full satisfaction. Although the product is splash-proof, do not intentionally expose it to water. The light source of this luminaire is non-replaceable, and at the end of its useful life, the entire luminaire must be replaced and disposed of at a designated location.

Charging: Charge using the microUSB cable. Charging is indicated by a red LED at the microUSB input. Once the battery is charged, the indicator glows green. The battery is 18650 12 00mAh type. You can insert 3x AA batteries to extend the battery life. Unscrew the bottom and insert the batteries. Please observe the marked polarity.

Control: the flashlight has three lighting modes, between which you switch by pressing the on button. The flashlight can function as a lantern. Pull out the top and it will automatically light up.



The bottom of the flashlight has strong magnets for attaching to metal objects.

CE  IP44