

## EN Solight WO43 Table Lamp Instructions For Use



Dear customer,

Thank you for buying our product. Carefully read through the following instructions and stick to them so that the product serves you safely and to your full satisfaction. That way it will not be used incorrectly and it won't get damaged. Prevent untrained handling of the device and always adhere to the principles of use of electrical appliances. Carefully store the instructions for use. Intended for use in the home or inside a room. Never expose to an environment with a high humidity (for example a bathroom), and prevent the product from coming into contact with liquid.

**Contents of package:** Table lamp with LCD display, charging adapter, and instructions for use. If any of the components are missing contact your salesperson.


### Specifications:

<b>Input</b>	DC5V/1A	<b>Luminosity</b>	300lm
<b>Dimensions</b>	145 x 145 x 330mm	<b>Power</b>	7W


### Use:




Connect the input connector of the power source to the input port of the table lamp. Then connect the charging adapter to the electrical socket.

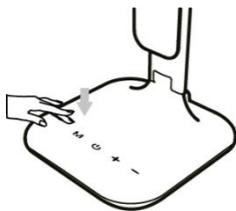

Switch the lamp on by pressing the ON/OFF button with your finger. The light intensity can be adjusted using the UP and DOWN buttons. You can change the temperature of the light by using the M button. There are 3 preset intensity levels: 1. Warm white light, 2. Cold white light, and 3. Natural light.

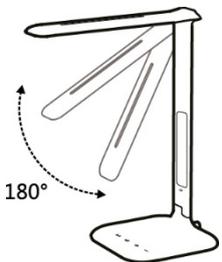


When setting the angle of light always hold the body of the lamp. The arm of the lamp can be moved at an angle of 180°. Excess bending of the hinge can lead to damage being caused.

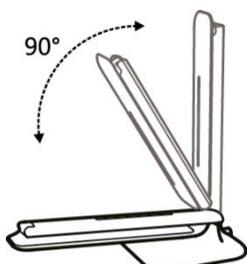

The body of the lamp can move at an angle of 90°; when setting up the desired angle always hold the base of the lamp.

### Battery installation:

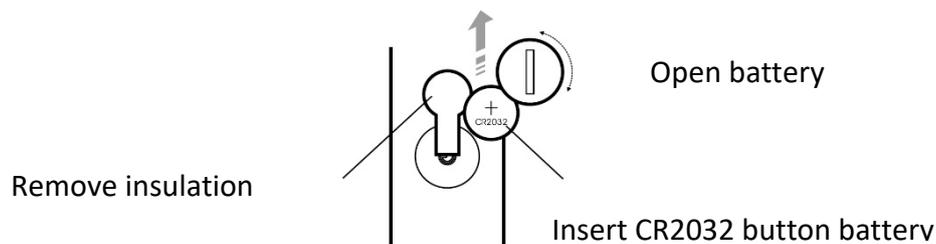

### Setup of date and time:

In the time display mode (*TIME* icon) press the **SET** button on the rear side of the lamp. That gets you into date and time setup mode. The order of setup is as follows: hours-minutes-years-months-days-save and return to time display mode. By pressing the **SET** button you move between individual settings. By using the **Up** and **Down** buttons you can set up the desired values. In order to save the settings press the **Mode** button or don't press any buttons for one minute. By pressing the **Up** button you switch between 12h mode and 24h mode of time display.

### Alarm setup:

In the time display mode press the **Mode** button. That gets you into alarm time display mode (*ALARM* icon). By pressing the **SET** button you get into alarm setup mode. The order of settings is as follows: hours-minutes-snooze ringing-melody-save and return to alarm time display mode. By pressing the **SET** button you move between individual settings. By using the **Up** and **Down** buttons you set up the desired time and melody. In alarm time display mode the **Up** and **Down** buttons are used to switch on and switch off the alarm function (*Z<sup>z</sup>* icon) and to postpone ringing. The alarm always runs for one minute and then the ringing gets postponed to the set value. By pressing the **Set** button or any other button you can switch the alarm off for 24 hours.

### Setup of thermometer:

By pressing the **Down** button you can switch between °C and °F.

Note: The values displayed by the display of the lamp are indicative and may show deviations compared to dedicated and calibrated instruments (thermometers, clocks, etc.). These deviations, if any, are within  $\pm 1.8^{\circ}\text{C}$  for a thermometer and approximately  $\pm 5$  min/month for a clock. Deviations within these values are not grounds for complaint.

The light source of this luminaire is non-replaceable, at the end of its service life the entire luminaire must be replaced and disposed of in a designated place. This product contains a light source that for design reasons cannot be removed for verification and therefore the entire product is considered a light source. The power cord cannot be replaced if damaged, the unit must no longer be used.

**Manufacturer:** Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic